



Thank you for purchasing this instrument from Intellitronix. We value our customers!

INSTALLATION GUIDE
Oil Pressure Sending Unit
Part Number: S8868

* Always disconnect the battery *before* attempting any electrical work on your vehicle. *



WIRING INSTRUCTIONS

Note: Automotive circuit connectors are the preferred method of connecting wires. However, you may solder if you prefer.

Oil Pressure – Orange - Replace the existing oil pressure sending unit with the unit included with your gauge. The Orange wire will be wired to the S terminal on the sending unit. This gauge is incompatible with other sending units.

Oil Pressure – Ground Wire- From the G terminal on sender will be wired to ground on the engine block using 18 Ga wire to ensure proper ground!

Securely connect orange wire to S terminal

Securely connect black/orange wire to G terminal

