

**Made in America**

**Lifetime Guarantee**



**Thank you for purchasing this instrument from Intellitronix. We value our customers!**

**INSTALLATION GUIDE**

**Corvette Tachometer recall**

**Part Number: TB2101**


**Year Series: '78 - '79**

**\* Disconnect the battery *before* attempting any electrical work on your vehicle. \***

**KIT COMPONENTS:**

◇ **One (1) Printed Circuit Board**

**CIRCUIT BOARD INSTALLATION INSTRUCTIONS**

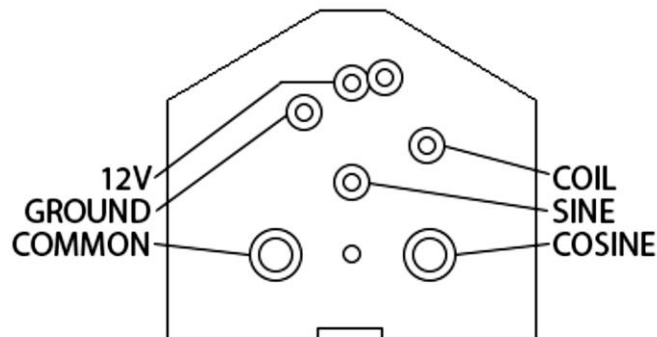

1. Remove the tachometer from the housing
2. Flip the tachometer over and remove the three nuts securing the circuit board to the gauge.
3. Remove the three remaining screws from the original circuit board.
4. Insert the three screws from step (3.) into the Intellitronix circuit board at the locations marked +12V, GND, and Coil.
5. Slide the circuit board onto the three screws pointing towards the gauge.
6. Replace the nuts back onto the three screws.
7. Put the tachometer back into your housing.
8. Adjust Potentiometer at normal driving RPM

# # #

For Technical assistance please call (440)359-7200 ext 109 or email at [support@intellitronix.com](mailto:support@intellitronix.com)