


Made in America

Lifetime Guarantee



Thank you for purchasing this kit from Intellitronix. We value our customers!

INSTALLATION GUIDE
High Four Headlight Kit
Part Number: 437484

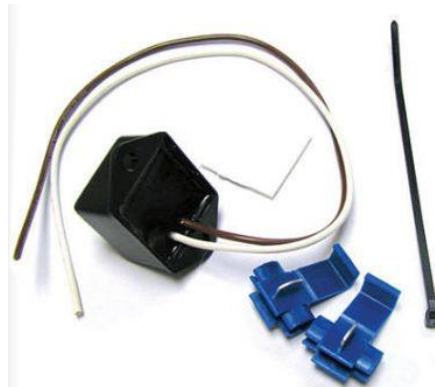


*** Always disconnect the battery before attempting any electrical work on your vehicle. ***

KIT COMPONENTS

- One (1) High Four headlight module
- Two (2) locking wire connectors
- Two (2) squares double sided tape

WIRING INSTRUCTIONS

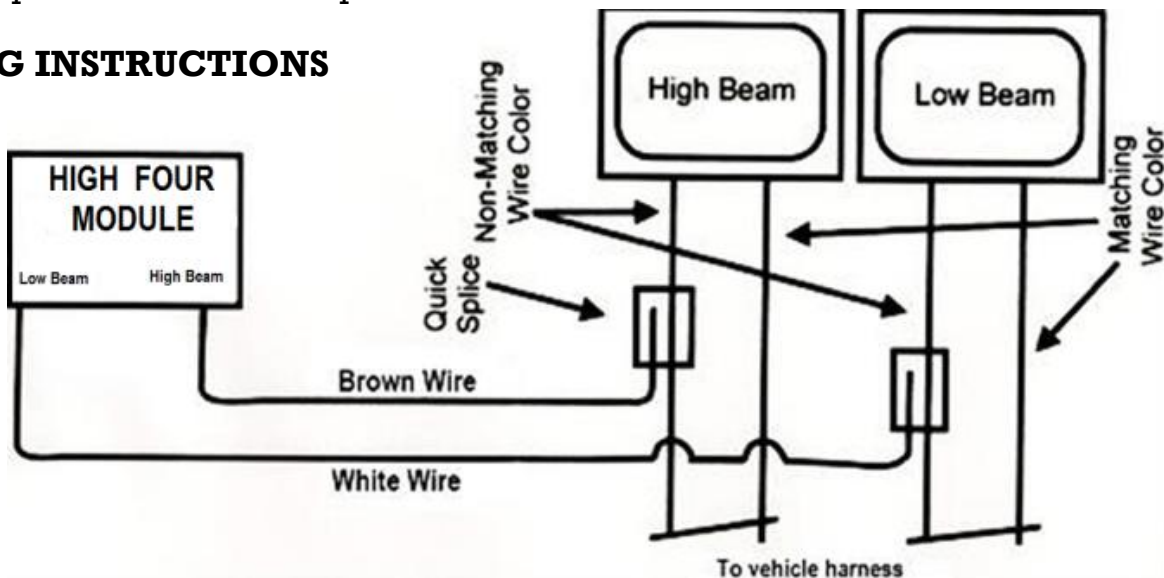

Note: Automotive circuit connectors are the preferred method of connecting wires, although you may solder if you prefer.

Note: If the high beam indicator stays lit and all four (4) lights are on when in low beam mode, it may be necessary to switch the wire polarity. This depends upon the application.

General Instructions

1. The module comes with two wires, *White* and *Brown*, for power and ground, respectively. These wires show the flow of electricity. The *White Wire* is for electricity going into the low beam lamp, and the *Brown Wire* is for electricity coming out of the High Beam lamp. Once installed, your headlights will work as before while in low-beam mode, but all four lights will come on in high-beam mode.
2. Locking wire connectors are provided in the kit. Follow the instructions below to connect the wires, using the provided wire connectors.
3. Double-sided tape is also provided to mount the assembly box in a convenient place. It is up to the installer to decide which is easier. There are also two mounting holes in the housing if you would like to mount it with screws or other fasteners (not provided).
4. Once installed, your headlights will work as before in low beam mode, but when you turn on your high beams, all four lights will come on.
5. This Intellitronix High Four Kit is ***not*** designed to work on S-series vehicles with high beam daytime running lights.

MODEL SPECIFIC INSTRUCTIONS

1999 - 2002 GM Trucks, 2000 - 2002 Full-Size SUVs (not Trailblazer)

Start on the driver's side and tilt the headlight assembly forward by pulling the two (2) pins that hold the headlight assembly in place.

Connect the *White* wire to the truck's *Purple* wire.

Connect the *Brown* wire to the truck's *Light Yellow* wire.

You **do not** need to use the truck's *Orange* wires.

Trailblazer (not S-Series)

Start on the driver's side and tilt the headlight assembly forward by pulling the two (2) pins that hold the headlight assembly in place.

Connect the *White* wire to the truck's *Orange* wire.

Connect the *Brown* wire to the truck's *Yellow* wire.

2003 - Present GM Trucks

Start on the driver's side and tilt the headlight assembly forward by pulling the two (2) pins that hold the headlight assembly in place.

Connect the *White* wire to the truck's *Yellow* wire.

Connect the *Brown* wire to the truck's *Green* wire.

You **do not** need to use the truck's *Black* wires.

Classic Body Trucks and SUVs

Find the wiring harness close to the driver's side fender. The harness will make a "Y" out toward both headlights.

Connect the module **before** this "Y".

Connect the *White* wire to the truck's *Brown* wire.

Connect the *Brown* wire to the truck's *Light Green* wire.

#

Made in America

Lifetime Guarantee



Technical Support

Monday – Friday

9am to 5 pm EST

(440) 210-7646

support@intellitronix.com



This product carries a limited Lifetime Warranty.

This warranty is limited to replacement or repair of the unit at the discretion of Intellitronix.