

**Made in America**

**Lifetime Guarantee**



**Thank you for purchasing this instrument panel from Intellitronix. We value our customers!**

**INSTALLATION GUIDE**

**Ford Mustang Digital Dash Panel**

**Part Number: DP7002**

**Year Series: 1967 – 1968**



**\* Always disconnect the battery *before* attempting any electrical work on your vehicle.\***

**\*Power up the unit before installing to ensure everything is working properly\***

**KIT COMPONENTS**


- ◇ Three (3) Digital Circuit Boards: Speedometer, Tachometer, and larger board with individual Fuel, Oil and Water Temp gauges.
- ◇ Three (3) Smoked Acrylic Lenses \* **Peel off protective covering from both sides of each lens**
- ◇ One (1) Temperature Sending Unit (***S8013 OR S8023***) \* ***1/8" NPT, 1/2" NPT Bushing***
- ◇ One (1) Pressure Sending Unit (***S8868***) \* ***1/8" NPT, 0-100 PSI Oil Pressure***
- ◇ One (1) Ford Speedometer Sensor (***S9024***)
- ◇ One (1) Mounting Kit
- ◇ (4) #6 X 1 ¼" panhead screws
- ◇ (3) #6 X 1" panhead screws
- ◇ (7) #8 Nylon Washers
- ◇ (4) #10 X 3/8" Spacers
- ◇ (3) #10 X 5/16" spacers

# DASH PANEL INSTALLATION INSTRUCTIONS

1. Remove all gauges from the stock bezel and housing. Position the new lenses for speedometer and tachometer into original housing, and then insert the gauges. Ensure to place a spacer between the circuit board and the lens for each of the screws. There are two screws in both the Speedometer and Tachometer. Once these are securely in place, add the larger lens into the bezel (on top of the larger gauges) followed by the multi-gauge board. There are three screw holes used across the center of the board. Utilize these holes and secure the screws in place following the same way as the other two gauges,
2. Secure assembled dash panel into vehicle, using existing stock screws, spacers, and washers, if required.


**\*Be sure to remove the plastic film from the lenses before installing**

Step 1

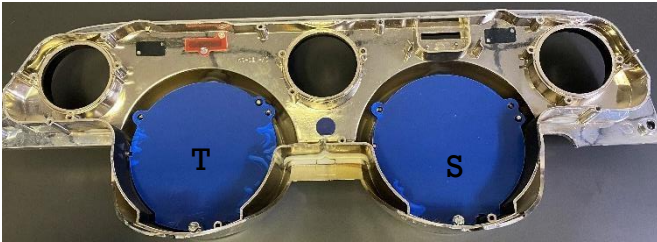


Line up Speedometer and Tachometer lens in the correct location (pieces are labeled)

Step 3

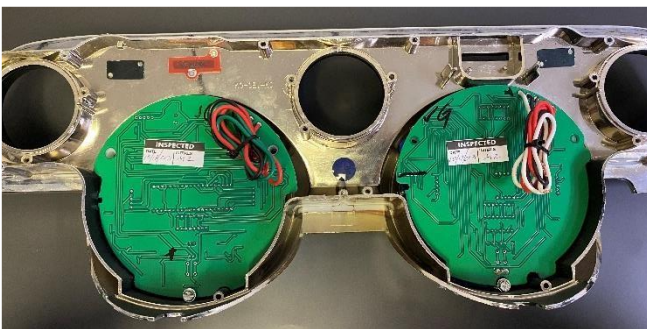


Place the circuit boards into the corresponding locations

Step 2

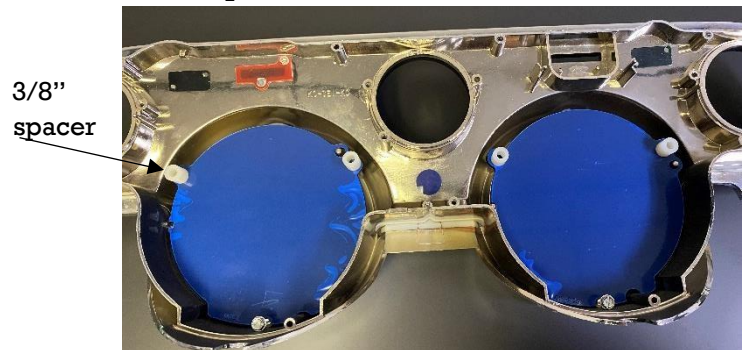


Place the #10 X 3/8" spacers over the screw holes as shown

Step 4

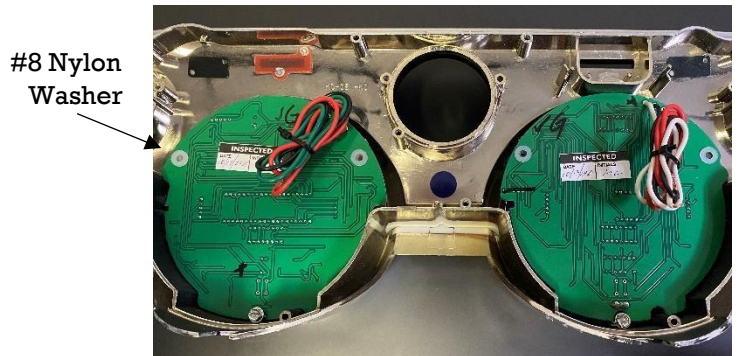


Place 4 of the #8 Nylon washer over the screw holes

Close up of step 5

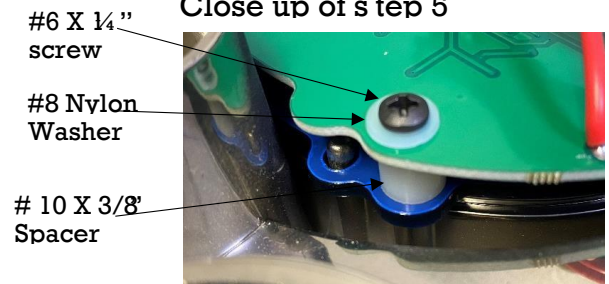


Insert the #6 X 1 1/4" panhead screws into the 4 locations with the washers

**Step 6**

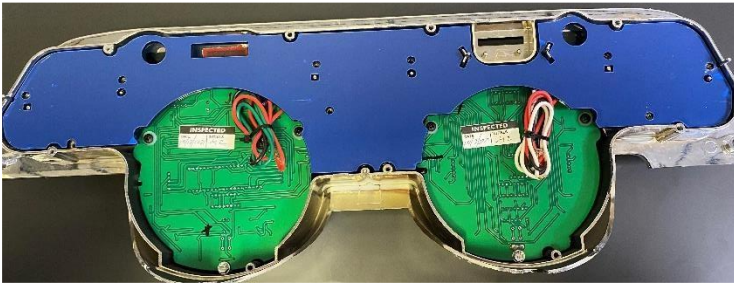


Place the instrument board lens into the bezel

**Step 7**

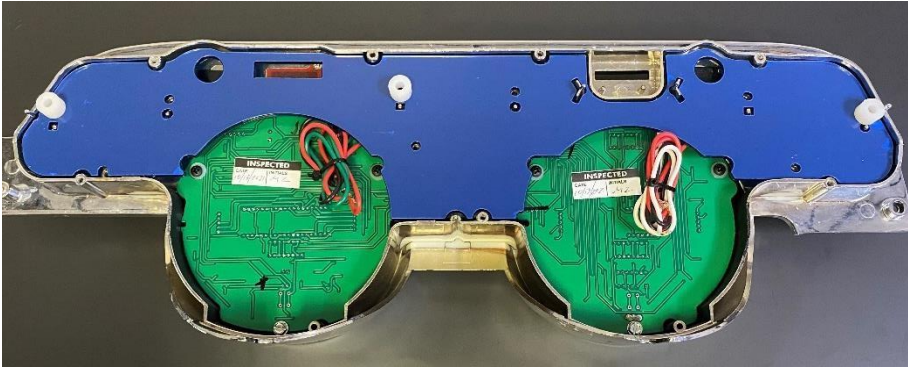


Use the #10 X 5/16" spacers between the lens and circuit board, following the locations pictured

**Step 8 & 9**

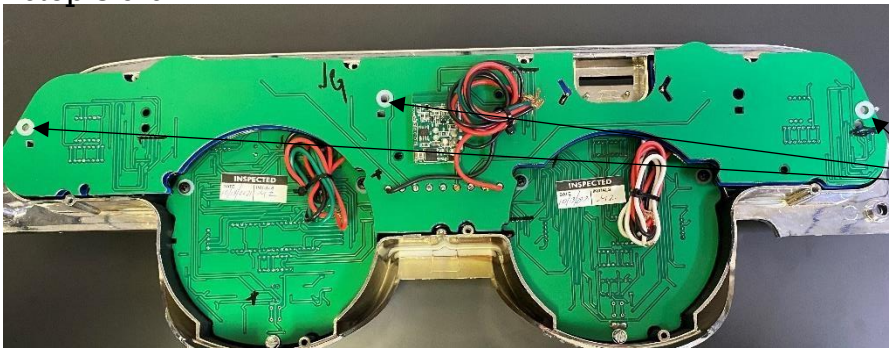


Place the instrument board over the spacers, and place the remaining # 8 Nylon Washers in the location's pictures

**Step 10**

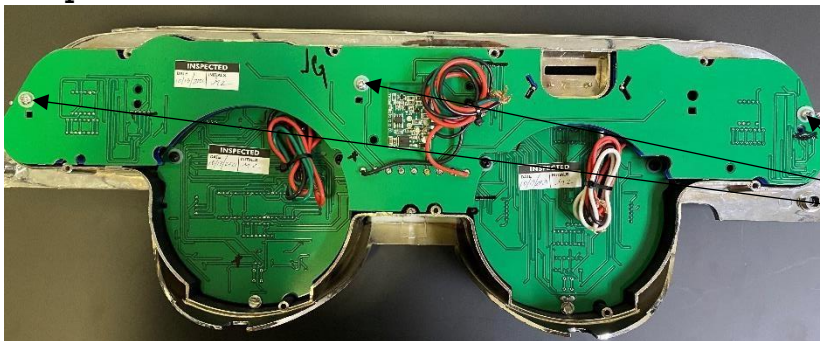

Insert the 3 #6 X 1" panhead screws to secure the instrument board into place

Step 10 close up

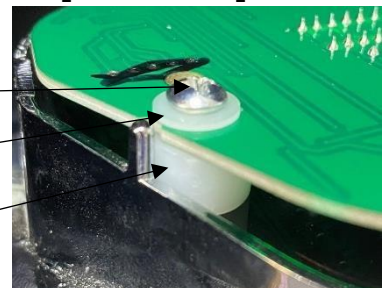

#6 X 1" screw

#8 Nylon Washer

#10 X 5/16" spacer

## WIRING INSTRUCTIONS

**Note: Automotive circuit connectors are the preferred method of connecting wires.**

**Note: Each board has a black, red and purple wire. They should all be joined together for better displays.**

**Ground – Black** This is the main ground for the display system. A wire should be run from this board to the vehicle's engine block ground. Use 18 AWG or larger wire to ensure sufficient grounding. Proper vehicle grounding is extremely important for any gauges (or electronics) to operate correctly. The engine block should have heavy ground cables to the battery, frame, and firewall. Failure to properly ground the engine block, senders, or digital dash panels can cause incorrect or erratic operation.

**Power – Red** Connect the power terminal to accessory +12V power from the fuse panel or vehicle wiring harness. This terminal should have power when the key is on or in accessory position. Use 18 AWG wire to ensure the system receives a sufficient power feed.

**Dimmer – Purple** Connect to the parking lights to dim the LEDs 50% when the headlights are on. However, **do not** connect to the headlight rheostat control wire, or the dimming feature will not work properly.


**High-Beam – Brown** Connect the brown wire on the speedometer panel to your high beam headlight.

**Turn Signals – Grey** Two 18-gauge wires, one for each signal. Each wire is labeled on the printed circuit board as 'LEFT' or 'RIGHT'. Connect each wire to its corresponding indicator circuit.

**Brake – Tan** Connect to the brake indicator.

**Oil Pressure – Orange** - Replace the existing oil pressure sending unit with the unit included with your gauge. The Orange wire will be wired to the S terminal on the sending unit. This gauge is incompatible with other sending units.

**Oil Pressure Ground Wire – black/orange or black/brown-** From the G terminal on sender will be wired to ground on the engine block using 18 Ga wire to ensure proper ground

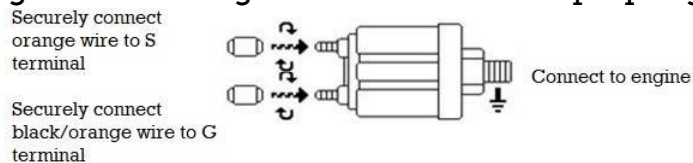

**Water – Blue** - This gauge is incompatible with other sending units, so you must replace the existing water temperature sending unit with the included sender. **Do not** use Teflon tape or other sealer on the new sending unit's threads to avoid inaccurate readings. Connect the blue wire to the sending unit. For best results we suggest running a new wire.

**NOTE: THE FOLLOWING INSTRUCTION ONLY PERTAINS TO THE TWO TERMINAL SENDER AND CIRCUIT BOARDS THAT ARE WIRED FOR THIS SENDER. NOT ALL KITS WILL CONTAIN A TWO TERMINAL SENDER.**

**Water –Black/ Blue** - This is a ground wire for the two terminal water temp sender. If your dash kit came with the single terminal sender this wire will go to the engine block ground. If using the two terminal sender this will go to the black/blue wire on the sender's harness. If your kit contains a two wire sender and your dash circuit board does not have the Black/Blue wire installed then run this wire coming off the senders harness to the same ground that the dash board is grounded too.

**Trip/Cal Button – Grey** There are two longer grey wires connected to the push-button on the speedometer board. Mount the switch in a convenient location such as under the steering column so that you may easily reset your trip odometer or other speedometer functions.

**Fuel – Yellow** The fuel gauge sending unit is not normally supplied because the display system can use the existing fuel level sending unit in the tank in most cases. If your wiring harness already has a single wire routed through the vehicle for the fuel sender then it may be used. If using a wire from an external harness, make sure that the wire does not have power. Fuel senders reference their ground from the sender mounting plate. Connect the yellow wire to the factory sending unit.





### FORD FUEL DIP SWITCH

DIP SWIT – ONE ON - - - - DIP SWITCH TWO ON = 73 TO 10

DIP SWIT – ONE ON - - - - DIP SWITCH TWO OFF = 16 TO 158

DIP SWIT – ONE OFF - - - - DIP SWITCH TWO OFF = 240 TO 33

DIP SWIT – ONE OFF - - - - DIP SWITCH TWO ON = 22 TO 145

Empty	Full	Switch Position	
73	10		UP-UP
16	158		UP-DN
240	33		DN-DN
22	145		DN-UP

ON

OFF

*The default setting for this dash is the Ford Industry standard of 73-10Ω*

### **Tachometer (memory capable) – Green**

If your vehicle has a **separate ignition coil**, connect the green wire to the **negative (-)** side of the coil – the wire that goes to the points or electronic ignition module.

To ensure that the ignition system does not interfere with any other dashboard functions, do not run the tachometer wire alongside any other sender or input wires. **Do not** use solid core spark plug wires with this dashboard system. Solid core ignition wires cause a large amount of electromagnetic and radio frequency interference which can disrupt the system's operation.

If your vehicle has a **GM HEI ignition**, connect to the terminal marked 'TACH', or, on some systems, a single white wire with a spade terminal.

If your vehicle has an **after-market ignition** – some systems will connect to the TACH output terminal.

If your vehicle has a **computer-controlled ignition** system, consult the service manual for the wire color and location.

If your vehicle has a **magneto** system, connect the tach signal wire to the negative side of the coil. **Do not** connect the tach terminal to the positive (+ or high voltage) side of the ignition coil. Many tachometers, shift lights or RPM-activated switches will not read directly from a Magneto, so your installation may need a Magneto Signal Converter to function properly.

**The default setting for the tachometer is for an 8-cylinder engine.**

#### **To change settings:**

The display will stay in Settings Mode until it receives a signal from the ignition system. To program the unit after starting the engine, shut the engine off and turn on only to the accessory position.

When in accessory mode, the settings menu will scroll through the settings menu. A light tap on the button engages the menu system.

1. Sets # of digits in RPM display, using button, display shows: (hundreds) 8800, (tens) 8880, and (ones) 8888.

2. Sets # of cylinders using button, display shows: 1cy, 2cy, etc.

For a 6-cylinder engine, set the DIP switches as  
Switch 1: UP and Switch 2: DOWN.

To recall the highest RPM achieved, simply press and release the button near the tach readout. To reset the peak RPM value, press and hold the button until the RPM displayed value is zero.

## **INTELLITRONIX DIGITAL PERFORMANCE SPEEDOMETER**

**Speedometer – White** Connect to the corresponding White wire on the sending unit or the output of your transmission. (Connect the other speedometer sending unit wire to the ground, preferably to the same exact location as the gauge ground.)

### **CALIBRATION**

**Note: If using the Intellitronix GPS Sending Unit, (S9020 – not included) the speedometer does not need to be calibrated.**

The speedometer leaves the factory with a pre-set industry standard setting of 8,000 pulses per mile. Chances are that you may not need to recalibrate your speedometer, unless you have changed the original tire size or the rear end gear ratio.

**Note: Do not attempt to calibrate your speedometer until after it is working properly and you have determined that the speed is incorrect. The calibration procedure will NOT correct a faulty installation or improper wiring. If you attempt to recalibrate your speedometer without making sure the speedometer is receiving pulses from the sending unit, the speedometer will display 'Err' and default back to the factory settings. To calibrate:**

1. **Locate a measured mile where you can safely start and stop your vehicle.** By running the vehicle over this measured distance, the speedometer will learn the number of pulses outputted by the speedometer sensor during a specific measured distance. It will then use this acquired data to calibrate itself for accurate reading. There is a small recall push-button in the center of the panel used to calibrate and read all of the data stored in the speedometer. After installing your speedometer according to the wiring instructions, when the ignition is on it should immediately display the default screen of **0 MPH**, if the vehicle is not moving. **NOTE: You will then need to drive your vehicle to the predetermined measured mile. During this trip, the speedometer should read something other than 0 MPH. If it does not change, return and locate the problem before continuing. Otherwise, proceed with the calibration.**
2. Stop at the beginning of the measured mile with your vehicle running and in odometer mode (NOT trip mode), press and hold the push-button until the odometer displays 'HI-SP'. On its own, the gauge will then cycle through the recorded performance in the following order: '0 – 60', '1/4', 'ODO', and 'CAL'.
3. While 'CAL' is displayed, quickly *tap* the push-button once. This will put the speedometer in Program Mode. If you did not tap while 'CAL' is displayed, the pulses per mile will be displayed on the odometer and the display will go back to MPH mode. Otherwise, you will now see 'CAL' displayed along with the number '0'. This indicates that the microprocessor is now ready for calibration.
4. When you are ready, begin driving on the metered mile. You will notice that the reading will start counting up. The odometer will begin to display the incoming pulse count. Drive the vehicle through the measured mile (speed is not important, only the distance traveled).
5. At the end of the mile, stop and press the push-button again. The odometer will now display the new number of speedometer pulses that were registered over the distance. The odometer will continue to display the pulse reading for a few seconds. Once it reverts to the default mode, you have successfully calibrated your speedometer.

**Warning:** *If, while in 'CAL' mode, you do not move the vehicle and press the button again, the microprocessor will NOT have received any data and the unit will display 'Err' and will revert to the factory settings. At a minimum, drive some distance and return to the start if necessary. If you miss stopping the display at 'CAL', simply repeat the steps.*

## **Trip Distance**

A single *tap* of the recall button will activate the trip meter in the odometer display. A decimal point will appear to indicate that you are in trip meter mode.  *Holding* the recall button will clear out the trip distance. To return to the default odometer display,  *tap* the recall button again. The decimal point will disappear, indicating that you are back in the default odometer display.

## **Setting the Odometer**

While scrolling through 'CAL' mode you will see 'ODO' appear. This will allow you to enter the vehicle's actual mileage. Press the trip button again at this point and you will enter the odometer set up mode. Press quickly to change the number of the digit on the right. Press and hold to advance to the next digit. Do this for all 5 digits. **For Example:** To enter the mileage reading 23456 into the odometer, at the 'ODO' prompt, tap the small black button (quickly) two times, until the number **2** is displayed. Then press and hold the button until the numbers **20** are displayed. Tap the button 3 times until **23** is displayed. Press and hold the button until **230** is displayed, and continue in this manner until **23456** is displayed. The speedometer will advance to the home screen, five seconds after the last number is entered.

## **Recording and Viewing Performance Data**

Follow these steps to record and recall Performance Data (high speed, ¼ mile ET, and 0-60 time):

1. Before each run, your car must be at a complete stop at the starting position.  *Press and hold* the push-button as it cycles through the performance data. At the end, the odometer will reset and all performance data will be cleared. This will not affect your stored calibration value or the odometer reading.
2. Press the push-button until 'HI-SP' is displayed. The gauge will automatically cycle through the performance data.
3. Start the run, pass, session, etc., as mentioned above.
4. When finished, repeat  *Step 2* to view the data gathered from the run. While stopped, you can view this data as often as you wish. However, once it finishes scrolling one time, the memory is ready to record new data and will begin recording again once the vehicle starts to move. The highest speed measured over multiple runs will be retained in memory.

# # #



**This product carries a limited Lifetime Warranty.**

**This warranty is limited to replacement or repair of the unit at the discretion of Intellitronix.**